 
RECLINER UNITS



Before operating, ensure that there are no objects obstructing the free movement of the back and legrest.



Always allow at least 30cm clearance behind the back of the unit.

ELECTRICAL GEAR

- Press and hold the recline button until you reach your desired position.
- 2. Press and hold the fold button to adjust the position or bring the seat to its initial position.
- 3. Press the automatic fold-up button once to bring the seat to its initial position automatically

MANUAL GEAR

- While seated, pull the handle located on the side of the armrest. This will unlock the reclining mechanism.
- 2. Recline your upper body pressing against the backrest until you reach your desired position.
- To bring the seat to its original position, sit-up and press your legs down against the legrest until the mechanism clicks back in a locked position.

