

 
LIST OF FITTINGS:



LIST OF WARDROBE ELEMENTS:

- 1. A and B WARDROBE SIDES 2 pcs.
- 2. C WARDROBE VERTICAL PARTITION 1 pc.
- 3. D and E BOTTOM AND TOP OF THE WARDROBE 2 pcs.
- 4. F BACK OF THE WARDROBE 2 pcs.
- 5. G SHELFS 3 pcs.
- 6. H WARDROBE HORIZONTAL PARTITION 1 pc.
- 7. I and J WARDROBE DOORS 2 pcs.
- 8. K DRAWER FRONT 1 pc.
- 9. L BACK OF THE DRAWER 1 pc.
- 10. Ł and M DRAWER SIDES 2 pcs.
- 11. N BOTTOM OF THE DRAWER- 1 pc.
- 12. O HANGER ROD 1 pc.

Hinge base





Nails 60 pcs.

Wooden handle with screw (optional) 4 pcs.

ASSEMBLY INSTRUCTIONS AND USER GUIDE FOR THE WARDROBE

F G G A A 9 D D

BEFORE YOU START: - Choose a wide space that allows for convenient wardrobe assembly. Make sure you have enough space to work.

Lay out the parts on soft level surface and compare to the part/ fittings and elements. Do not discard any packaging until you are sure that you have all the parts. Ensure that your child is kept away during assembly due to small parts, your child's safety is your responsibility. Do not put wardrobe components on screws and fittings that they could cause damage. The use of a cordless screwdriver to tighten screws is discouraged. Too tight components can damage the quality of parts and the comfort of assembling furniture. When assembling the wardrobe, carefully follow the instructions step by step as described in this manual, and keep manual for later use.

ASSEMBLY DESCRIPTION

ATTENTION: It is recommended that assembly and disassembly be carried out in the lying position of the cabinet and by two people.


- . Assembling the vertical partition [C] with the horizontal partition [H] slid the Wooden dowels [8] into the inner holes of the part [C]. Connect the parts [C and H] and screw the Confirmat screw [2] from below in the part [H]. Assemble the Vertical partition [C] with the middle shelf [G] insert the Cam locks [4] into the holes on the surface of part [G], then screw the Cam lock bolts [3] into the part [C]. Next, connect partition [C] with the middle shelf [G] and turn the Cam lock [4] -clockwise.
- II. Insert the Cam locks [4] in the surface of the parts [G] and [H], and slid the Wooden dowels [8] in the inner holes of part [H]. Screw the Cam lock bolts [3] into the smaller holes on the surface of parts [A and B]. Connect the vertical side [A] simultaneously with the horizontal parts [G and H]. Next connect side [B] with the part [H]. Turn Cam locks [4] clockwise. Screw the Legs under the wardrobe [9] to the bottom part [D], by using the Confirmat screws [2] Insert the Wooden dowels [8] into the holes of the inner sides of the sides [A and B], connect to the part [D], and connect by screwing the Confirmat screws [2].
- Assembling the upper part [E] with the sides [A and B] and the vertical partition [C]. Insert the Wooden dowels [8] into the inner holes on the top of parts [A, B and C]. Put the part [E] on the top, and screw everything with Confirmat screws [2].
- V. Assembling the back of Wardrobe [F]. Put the Wardrobe face down on the floor. Check that the sides are even and Wardrobe is leveled. Next attach Part [F] with all sides and vertical partition [C], by using nails [13].
- f V. The Wardrobe doors [**J** and l] should be assembled by using the hinges .


Part 10 - use screws [6] 3.5 - for assembling Hinge to doors .

Hinge Base [11] should be screw inside the wardrobe by screws [7] 4,5


VI. Assembling the drawer. Screw the Cam lock bolts [3] into the smaller holes of Drawer front [K]. Insert Wooden dowels [8] on sides, and Cam locks [4] in the inner part of elements.

Next connect sides with Drawer front [K], and screw Cam locks [4] clockwise. Then slide the bottom of the drawer [N] into the grooves, and connect the back of the drawer [L] to the sides of the drawer by using Confirmat screws [2].

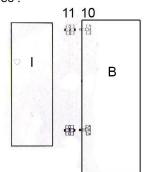

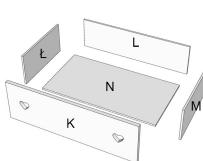


DOORS REGULATION

 

I: If the door is not attached at an equal height.

 Unscrew all screws - A - in the door incorrectly placed, then adjust the door height, and tighten screws - A- again.



II: If the door is placed crosswise.

To align the door towards the center, unscrew the- C -screw outwards, then set the door, and tighten the - C screw again

ARRANGEMENT INSIDE THE WARDROBE

Shelves can be placed at required height. Use Prongs under the shelf [5].

The hanger [O] should be attached on the left side of the Wardrobe - First place the Hanger holders [12] into the holes intended for this.

ASSEMBLY INSTRUCTIONS AND USER GUIDE FOR THE WARDROBE

WARNINGS:

- It is recommended that the screws be tightened and check from time to time, so that none are loosened, as the child could hook parts of the body or clothing (e.g. string, necklace, ribbon, etc.). This could cause a suffocation hazard.
- Make sure there are no unnecessary sticking out parts (fittings)- before using .
- Do not use if any part is broken, torn or missing. Use only spare or replacement parts approved by the manufacturer.
- Do not place Wardrobe near heat sources. Be aware of the risk of open fire and other sources of strong heat, such as electric bar fires, gas fires, etc
- It is strongly recommended that children are supervised and discouraged from playing, climbing or hiding in Wardrobe!
- Wood is a natural product, its color may change over time and additional discoloration may occur, for example when the furniture is exposed to sunlight for a long time.

Cleaning & Maintenance instructions

Wardrobe may be cleaned by wiping with a damp cloth and

drying with a soft clean cloth. Furniture care products may be used as well.

Do not use abrasives, bleach, alcohol or ammonia-based household polishes.

Handling of the used product - Renewable material wood - the product can be utilized to recover energy or material for further processing.