




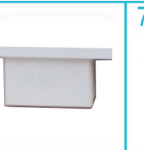 






LIST OF FITTINGS:

1	2	3	4	5	6	7	8	9	10
									
Wrench 1 pcs.	Confirmat screw 14 pcs.	Cam lock bolt 10 pcs.	Cam lock 10 pcs.	Wooden dowels 32 pcs.	Legs under the Chest of drawers 4 psc.	Nails 30 pcs.	Wooden handle with screw 6 pcs.		

LIST OF THE ELEMENTS CHEST OF DRAWERS:

- 1. A and B - CHEST OF DRAWER SIDES - 2 pcs.
- 2. D - TOP, and BOTTOM - C - OF THE CHEST - 2 pcs.
- 3. E - BACK PANELS - 2 pcs. (optional 3 pcs. in wider version)
- 4. F - BACK PANELS CONNECTOR - 1 pcs. (or 2 pcs. - optional)

 
 
LIST OF DRAWER ELEMENTS:

- 5. G - BACK OF THE DRAWER - 3 pcs.
- 6. H - DRAWER FRONT - 3 pcs.
- 7. I - DRAWER SIDES - 6 pcs.
- 8. J - BOTTOM OF THE DRAWER - 3 pcs.

LIST OF ELEMENTS CHANGING ADD:

- 9. K - RIGHT AND LEFT SIDE - 2 pcs.
- 10. L - HORIZONTAL ELEMENTS - 2 pcs.
- 11. M- BACK SIDE - 1 piece.

ASSEMBLY INSTRUCTIONS AND USER GUIDE CHEST OF DRAWERS WITH CHANGING ADD



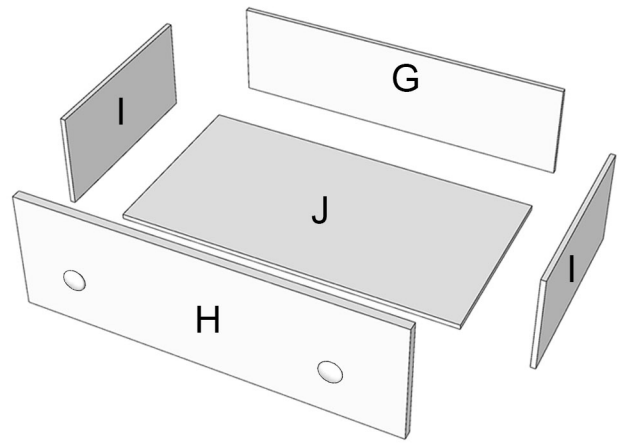
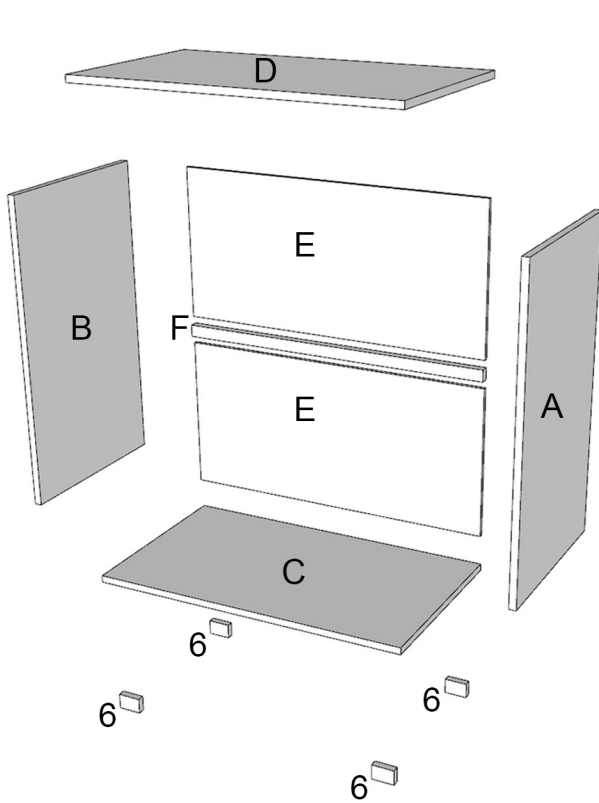


BEFORE YOU START: - Choose a wide space that allows for convenient assembly. Make sure you have enough space to work.
Lay out the parts on soft level surface and compare to the part/ fittings and elements.
Do not discard any packaging until you are sure that you have all the parts.
Ensure that your child is kept away during assembly due to small parts, your child's safety is your responsibility.
Do not put elements on screws and fittings that they could cause damage.
The use of a cordless screwdriver to tighten screws is discouraged. Too tight components can damage the quality of parts and the comfort of assembling furniture.
When assembling the Chest of drawers, carefully follow the instructions step by step as described in this manual, and keep manual for later use.

ASSEMBLY DESCRIPTION


ATTENTION: It is recommended that assembly and disassembly be carried out in the lying position of the Chest of drawers, and by two people.

I. Assembling the sides **[A and B]** with the Top **[D]**, and Bottom **[C]**. Insert the Wooden dowels **[5]**, into the holes of the part A and B, connect with part C, and screw from bottom with Confirmat screws **[2]**. Please see pictures 1 and 2.

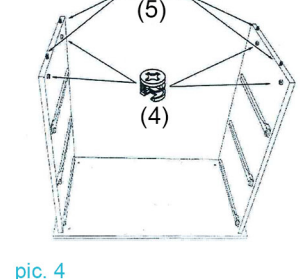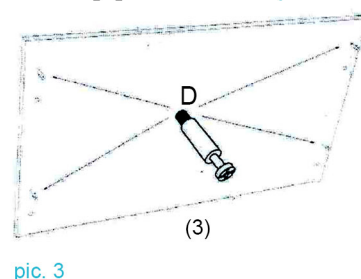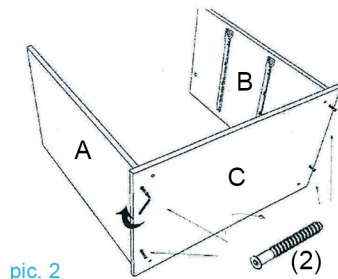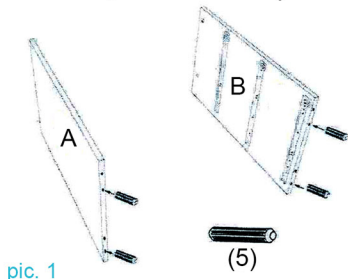

Screw the Cam lock bolts **[3]** into the smaller holes of the upper part **[D]** Please see picture 3. Insert the Cam locks **[4]** and Wooden dowels **[5]** in the inner parts **[A and B]** Please see picture 4. Put Top part **[D]** on sides **[A and B]**, next screw cam locks **[4]** clockwise. Next attach the legs **[6]** to Bottom part **[C]** by using Confirmat screws **[2]**.





II. Assembling back of Chest of drawers. Put the chest face down on the floor. Check that the sides are even and Chest is leveled. Next connect back panels **[E]** by connector **[F]**, and attach to sides with nails **[7]**. Please see picture No. 5

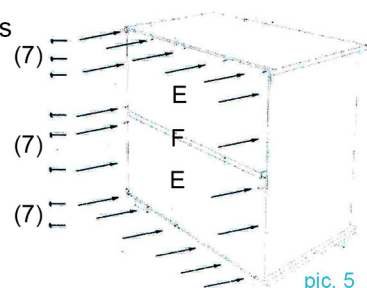

III. Assembling of drawer. Screw the Cam lock bolts **[3]** into the smaller holes of Drawer front **[H]**. Insert Wooden dowels **[5]** on sides, and Cam locks **[4]** in the inner part of elements **[I]**, Please see picture no 6. Next connect Parts **[I]** with Drawer front **[H]**, and screw Cam locks **[4]** clockwise. Then slide the bottom of the drawer **[J]** into the grooves and connect the back of the drawer **[G]** to the sides of the drawer **[I]** by using Confirmat screws **[2]**. Please see picture No. 7

IV. Assembling of Changing add: Connect parts **[K]** and **[L]** by using Confirmat screws **[2]**. Next put wooden dowels **[5]** in back of elements **[K]** Please see picture No. 8.

Next connect with back part of Changing add **[M]** by screwing Confirmat screws **[2]**. Please see picture No. 9
Put on top of Chest of drawer, as it shown in title page of Manual.

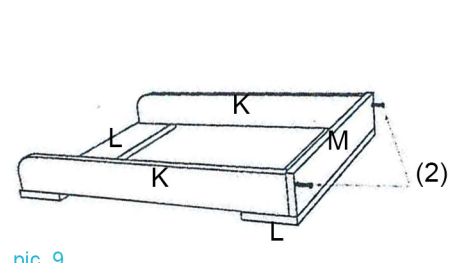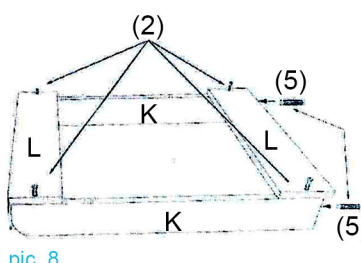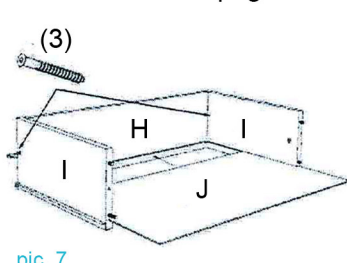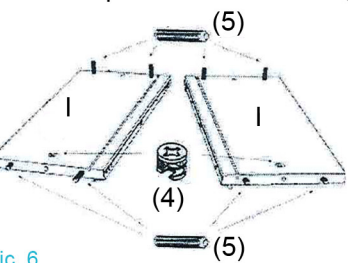

pic. 6

pic. 7

pic. 8

pic. 9

ASSEMBLY INSTRUCTIONS AND USER GUIDE
CHEST OF DRAWERS WITH CHANGING ADD

WARNINGS:

- It is recommended that the screws be tightened and check from time to time, so that none are loosened, as the child could hook parts of the body or clothing (e.g. string, necklace, ribbon, etc.). This could cause a suffocation hazard.
- Make sure there are no unnecessary sticking out parts (fittings)- before using .
- Do not use if any part is broken , torn or missing. Use only spare or replacement parts approved by the manufacturer.
- Do not place chest of drawers near heat sources. Be aware of the risk of open fire and other sources of strong heat, such as electric bar fires, gas fires, etc
- It is strongly recommended that children are supervised and discouraged from playing, climbing or hiding in Chest of Drawer!
- Wood is a natural product, its color may change over time and additional discoloration may occur, for example when the furniture is exposed to sunlight for a long time.

CLEANING & MAINTENANCE INSTRUCTIONS

- Chest of drawers may be cleaned by wiping with a damp cloth and drying with a soft clean cloth. Furniture care products may be used as well.
- Do not use abrasives, bleach, alcohol or ammonia-based household polishes.

Handling of the used product - Renewable material wood - the product can be utilized to recover energy or material for further processing