
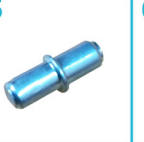
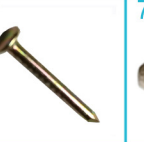



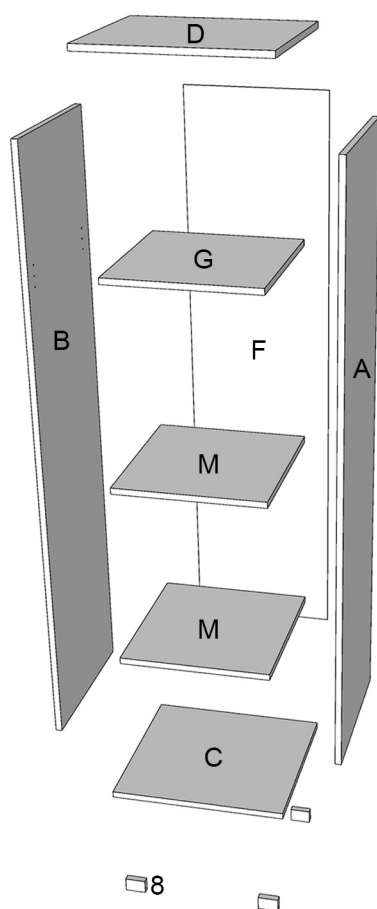


#### LIST OF FITTINGS:

1	2	3	4	5	6	7	8	9	10
									
Klucz 1 szt.	Confirmat screw 14 pcs.	Cam lock bolt 10 pcs.	Cam lock 10 pcs.	Prong under the shelf 8 pcs.	Nails 30 pcs.	Wooden dowels 24 pcs.	Legs (under the bookshelf) 4 pcs.	Wooden handle with screw (Optional) 1 pcs.	

#### LIST OF ELEMENTS:

1. A and B - Bookshelf sides
2. C - Bottom and D - top of the Bookshelf
3. F - Back part of the Bookshelf
4. G - Shelf
5. H - Drawer front
6. I - Back of the drawer
7. J and K - Drawer sides
8. L - Bottom of the drawer
9. M - Permanently installed shelf - 2 pcs.



**BEFORE YOU START:** - Choose a wide space that allows for convenient bookshelf assembly. Make sure you have enough space to work.

Place the parts on a soft, even surface and compare them with the parts and fittings in this installation manual.

Do not discard any packaging until you are sure that you have all the parts.

Ensure that your child is kept away during assembly due to small parts, your child's safety is your responsibility.

Do not put wardrobe components on screws and fittings that they could cause damage.

The use of a cordless screwdriver to tighten screws is discouraged. Too tight components can damage the quality of parts and the comfort of assembling furniture.

When assembling the wardrobe, carefully follow the instructions step by step as described in this manual, and keep manual for later use.

## ASSEMBLY DESCRIPTION

**ATTENTION:** it is recommended that assembly and disassembly be carried out in the lying position of the Bookshelf and by two people.

Warning! It is recommended that the screws and cam locks, would not be tightened until all parts will be connected. Please leave unscrewed around 1 cm!

**I. Assembling the Bookshelf sides [A] and [B] with the permanently installed shelf's [M]** - slide the Wooden dowels [7] into the inner holes of the sides of shelf's - the ones that are not connected with holes on the surface of shelf.

Insert the Cam locks [4] into the holes on the surface of shelf's [M], then screw the Cam lock bolts [3] into the part [A] and [B].

Please check the height of the shelves in the picture. Connect the parts of the bookshelf in a lying position.

**II. Assembling parts [C].**

Screw the Legs under the bookshelf [8] to the bottom part [C], by using the Confirmat screws [2].

Insert the Wooden dowels [7] into the holes of the inner sides of the sides [A] and [B], connect to the part [C], next connect by screwing the Confirmat screws [2].

**III. Assembling the upper part [D] with the sides [A, B].**


Insert the Wooden dowels [7] into the inner holes- on the top of parts [A, B]. Then screw everything with Confirmat screws [2]. Now tighten all Confirmat screws and Turn Cam locks [4] - clockwise.

**IV. Assembling the back of Bookshelf [F].** Put the Bookshelf face down on the floor. Check that the sides are even and Bookshelf is leveled. Next attach part [F] with all sides by using nails [6].

**V. Assembling the drawer.** Screw the Cam lock bolts [3] into the smaller holes of Drawer front [H]. Insert Wooden dowels [7] on sides, and Cam locks [4] in the inner part of elements. Next connect sides with Drawer front [H], and screw Cam locks [4] clockwise. Then slide the bottom of the drawer [L] into the grooves, and connect the back of the drawer [I] to the sides of the drawer by using Confirmat screws [2].

Arrangement inside the bookshelf:

Shelf [G] can be placed at required height. Use Prongs under the shelf [5].

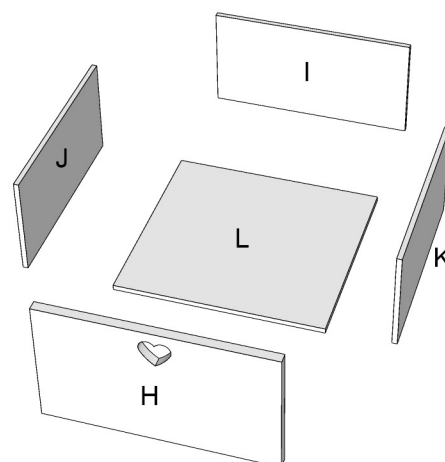

ASSEMBLY INSTRUCTIONS AND USER GUIDE  
BOOKSHELF WITH DRAWER

WARNINGS:

- It is recommended that the screws be tightened and check from time to time, so that none are loosened, as the child could hook parts of the body or clothing (e.g. string, necklace, ribbon, etc.). This could cause a suffocation hazard.
- Make sure there are no unnecessary sticking out parts ( fittings)- before using .
- Do not use if any part is broken , torn or missing. Use only spare or replacement parts approved by the manufacturer.
- Do not place Bookshelf near heat sources. Be aware of the risk of open fire and other sources of strong heat, such as electric bar fires, gas fires, etc
- It is strongly recommended that children are supervised and discouraged from playing, climbing or hiding in Bookshelf!
- Wood is a natural product, its color may change over time and additional discoloration may occur, for example when the furniture is exposed to sunlight for a long time.

Cleaning & Maintenance instructions

- Bookshelf may be cleaned by wiping with a damp cloth and drying with a soft clean cloth. Furniture care products may be used as well.
- Do not use abrasives, bleach, alcohol or ammonia-based household polishes.

Warranty Card

- 1.Pinewood S.C. provides a 24-month warranty from the date of purchase by the customer.
2. Warranty repairs are made by Pinewood within 14 days from the date of delivery to the repair point, and the warranty period is extended by the repair time.  
(Warehouse address: ul.Spółdzielcza 1, 34-240 Jordanów, Poland)
3. The warranty does not cover damage resulting from improper assembly, mechanical damage resulting from improper use, handling, storage, and any tears and damage caused by the fault of the customer.
4. The warranty does not cover discoloration of the wood caused by exposure to sunlight.
5. The basis for submitting a complaint is a receipt (usually placed under the bill of lading on the carton) , or an invoice.