



TULM - 036 ASSEMBLY INSTRUCCION

| Fitting Lists. | | | |
|----------------|-------------|----|------|
| 1 | JCB M8x40 | 13 | PCS. |
| 2 | WRENCH No.5 | 1 | PCS. |

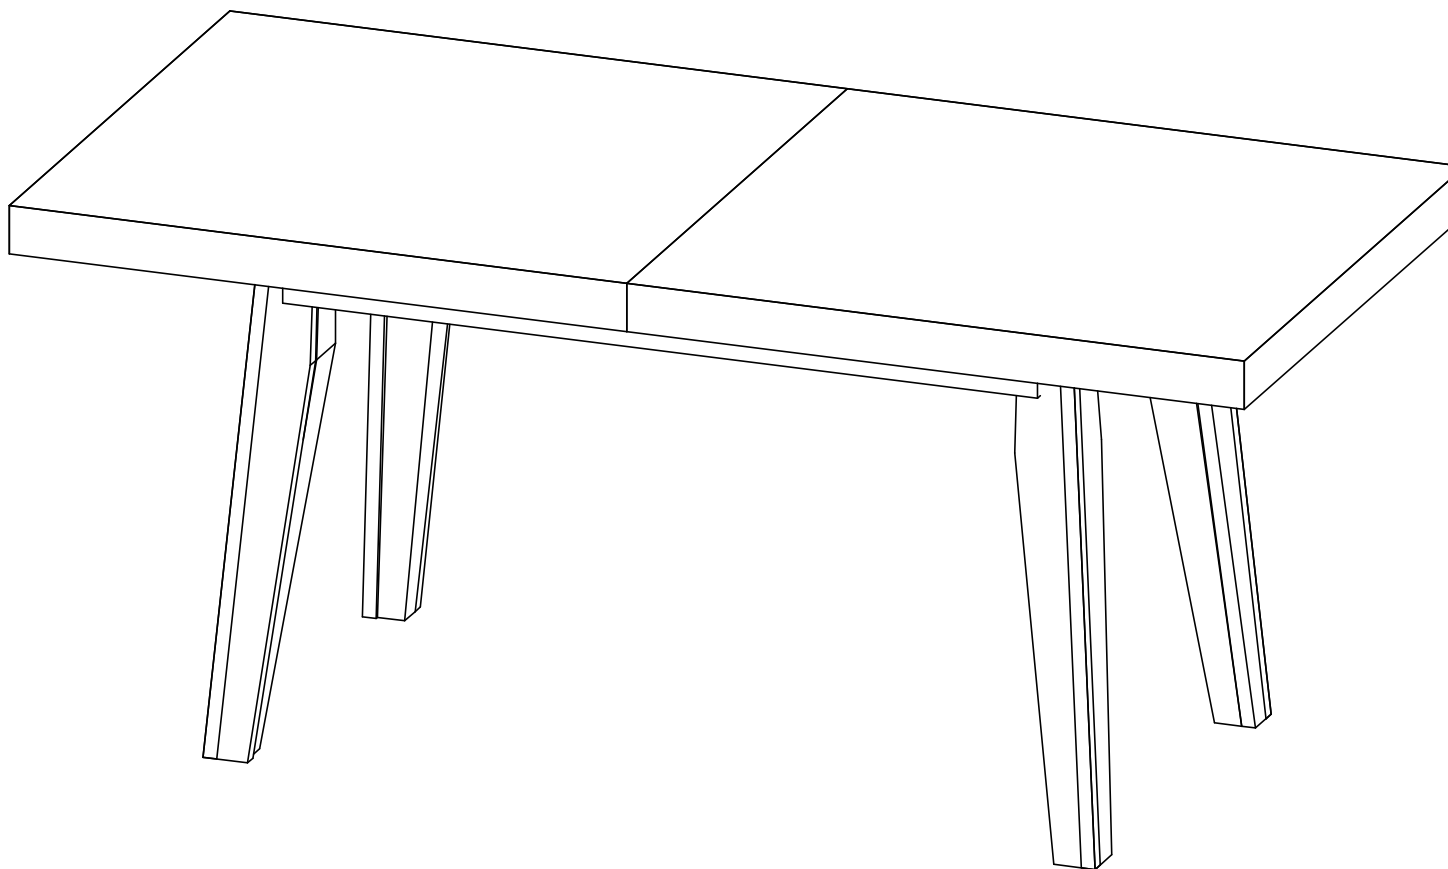


- 1 Put PART-A and PART-B together tightly.
Use L-Wrench No.5 to drill in JCB M8x40 into the drill holes.

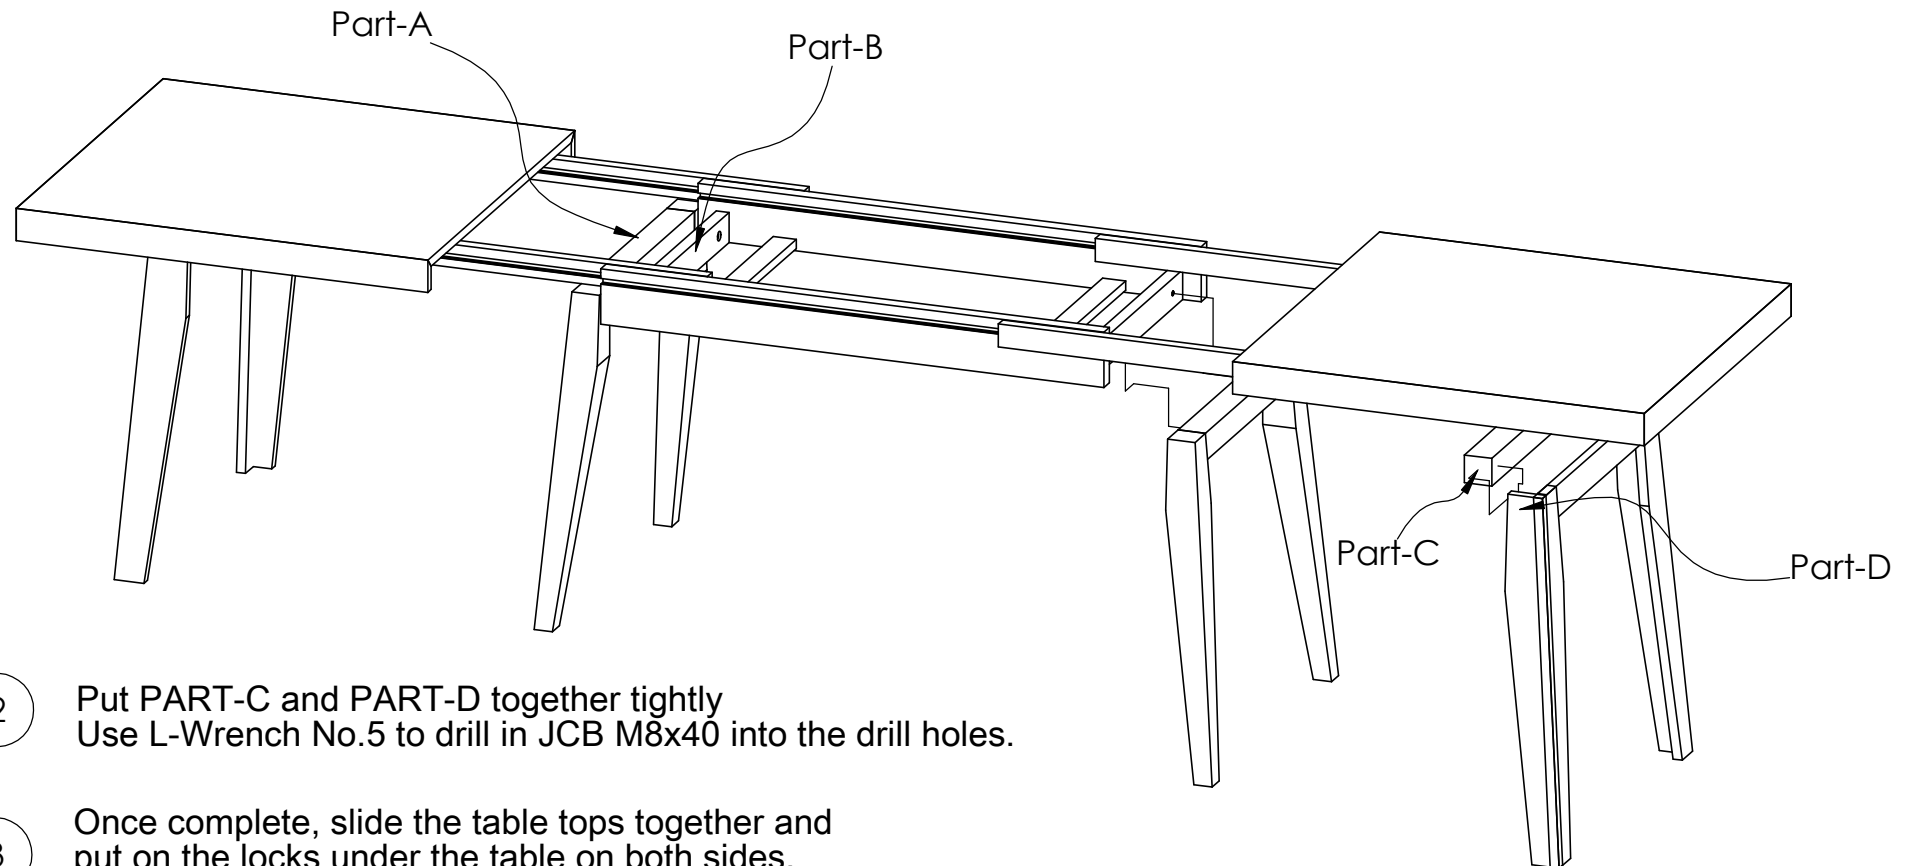

- 2 Put PART-C and PART-D together tightly.
Use L-Wrench No.5 to drill in JCB M8x40 into the drill holes.
- 3 Once complete, slide the table tops together and
put on the locks under the table on both sides.

1 Pull and extend 2 large table tops to both sides.

2 4 small table tops onto this area.

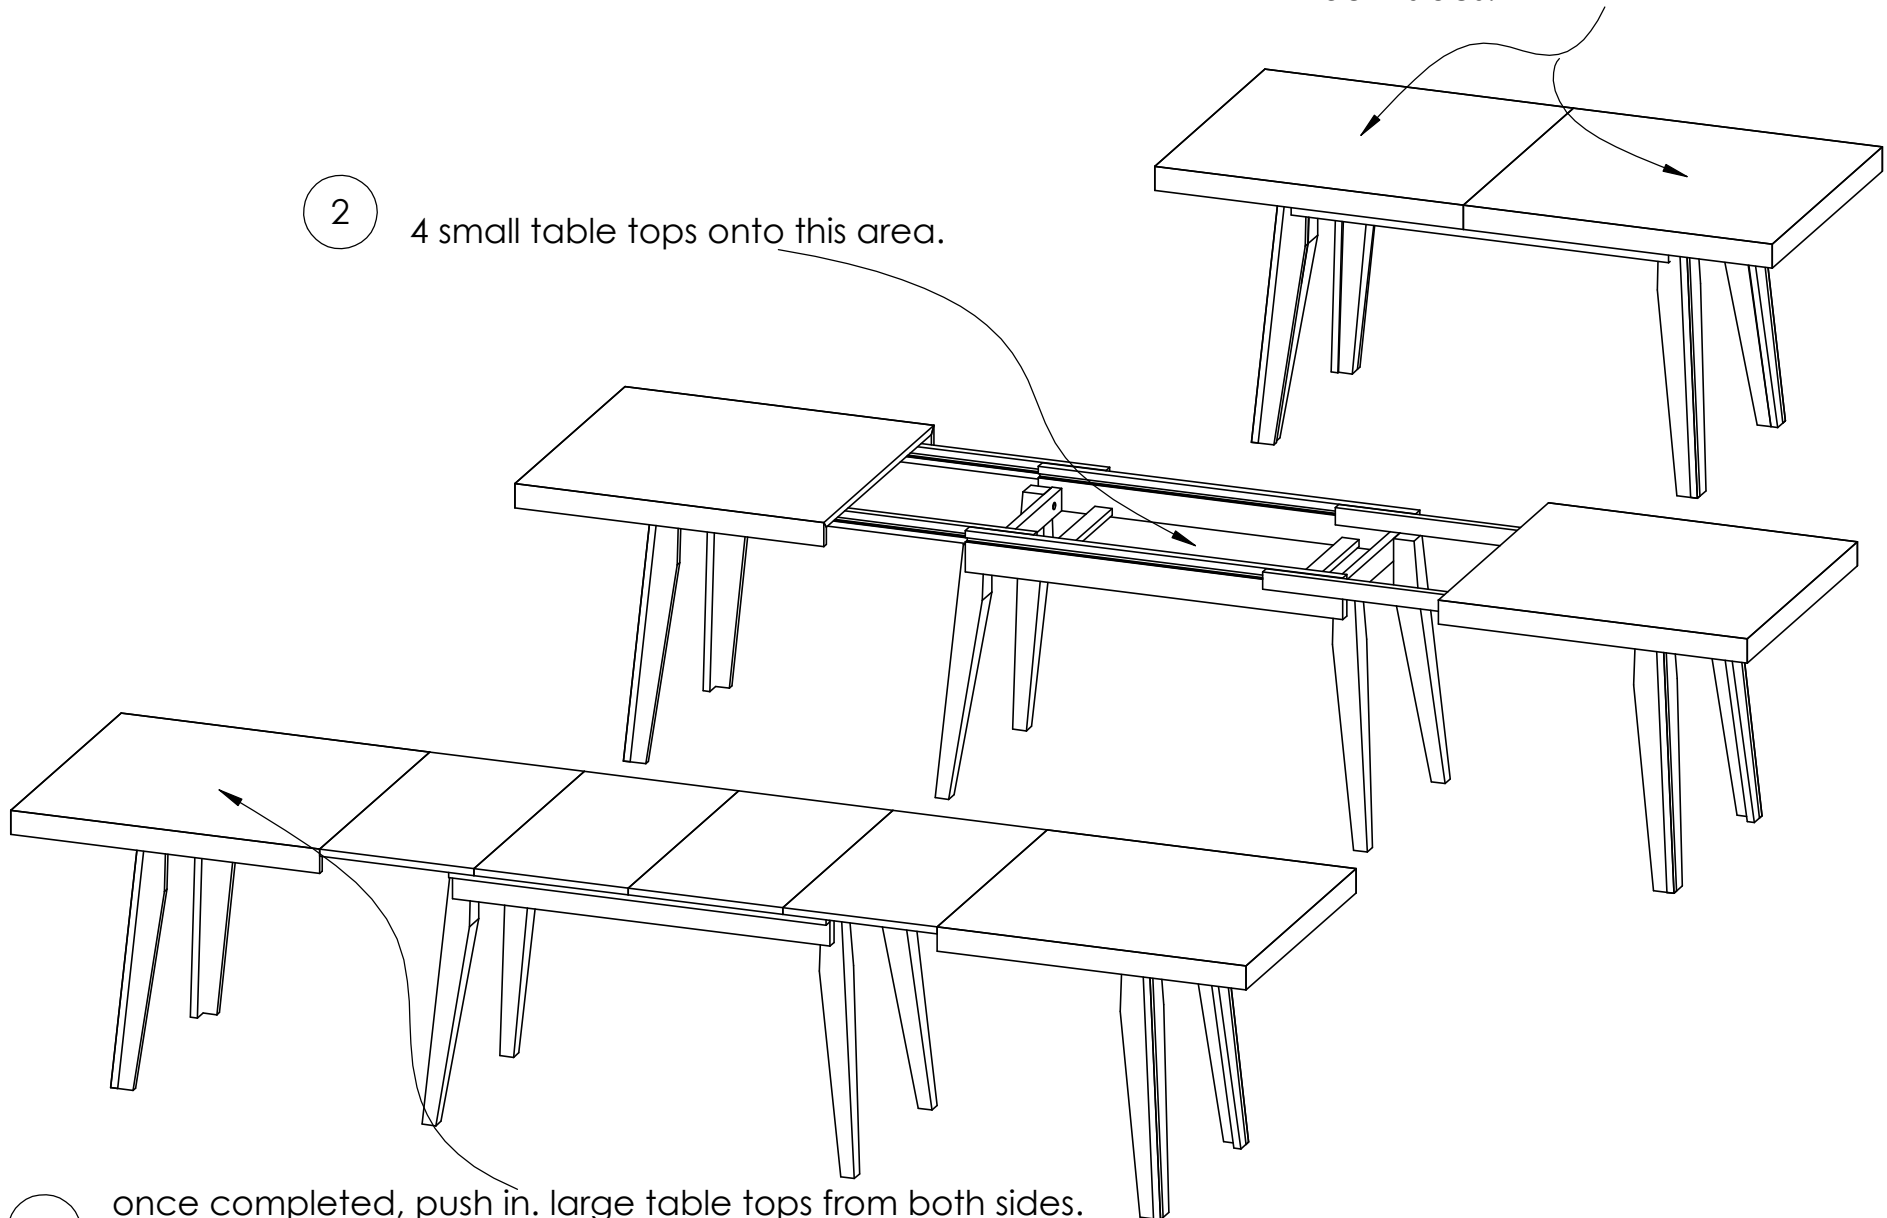

3 once completed, push in. large table tops from both sides.
to ensure small table tops are well put together.