


















ASSEMBLY INSTRUCTION


MODEL : CF 8980-B (5'6")

A		1 pc
B		1 pc
C		2 pcs
D		4 pcs
E		1 pc
F		2 pcs
G		28 pcs
H		14 pcs
I		28 pcs
J		2 pcs
K		1 pc
L		1 pc
M		2 pcs
N		14 pcs
O		2 pcs
P		1 pc


Step 1 : Tighten the legs (D) to the headboard (A) and footboard (B) as shown.

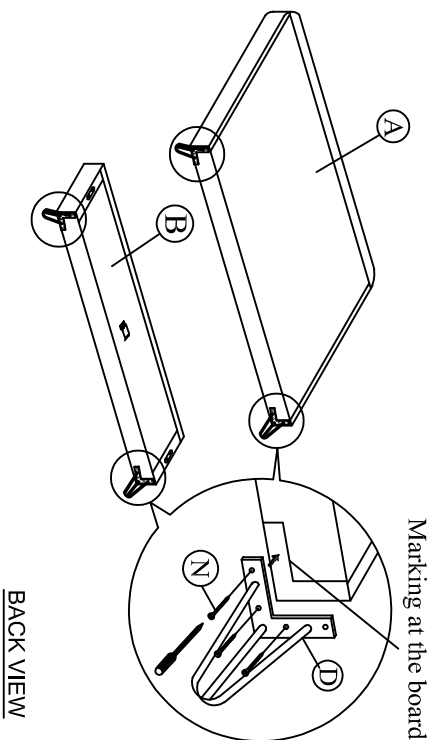


Step 2 : Attach side rail (C) to headboard (A) and footboard (B) by pushing the bracket down to fit it.

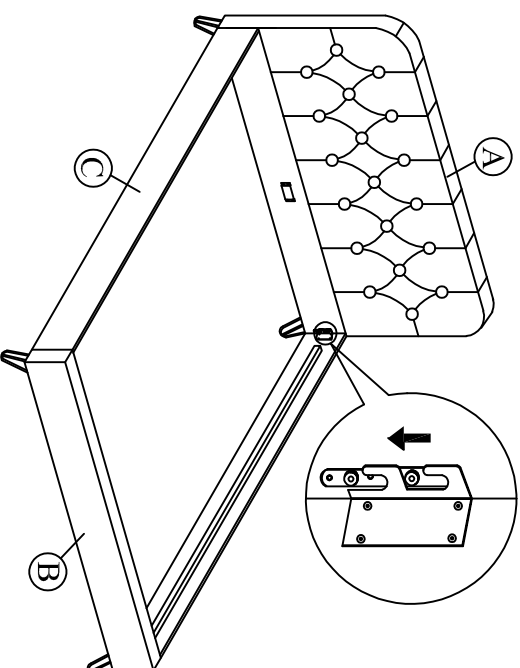


Step 3 : Attach the support legs (F) to the center rail (E) of the bed as shown.

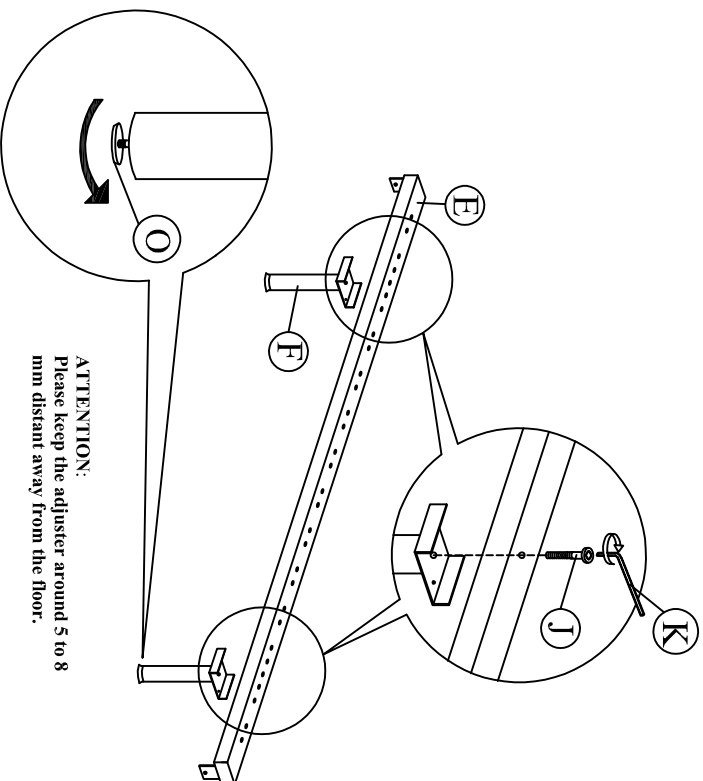

Step 4 : Slide the center rail (E) to the headboard (A) and footboard (B). Tighten screws (M) using screw driver (not included) to the headboard (A) and footboard (B)

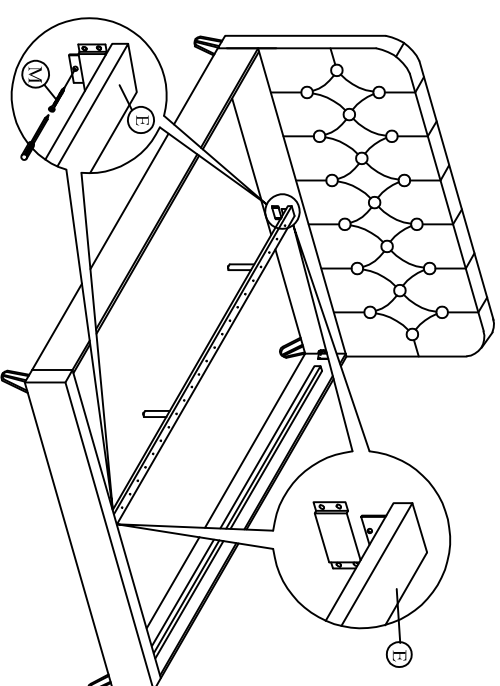

ATTENTION:
Please keep the adjuster around 5 to 8
mm distant away from the floor.

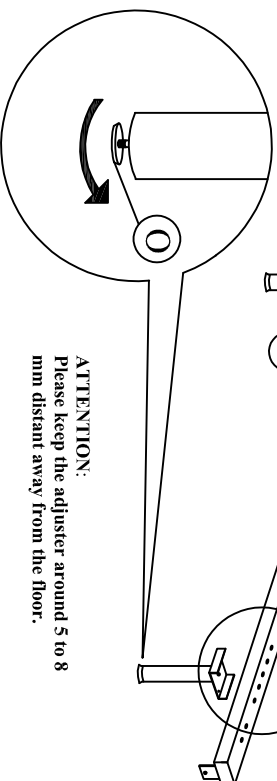

Step 5 : Affix the Stiffener Slat (P) to the side rail support wood and the center rail (E). Tighten all the 4 corner, follow by assembly of the slat holders with LVL slats as shown.

