

# MODEL : CF 9108 (5'x6'6")

# ASSEMBLY INSTRUCTION


A	Headboard	1 pc
B	Footboard	1 pc
C	Side Rail	2 pcs
D	Leg	2 pcs
E	Center Rail	1 pc
F	Support Leg	2 pcs
G	Slat	28 pcs
H	Middle Holder	14 pcs
I	Bed Holder	28 pcs
J	Front Panel	1 pc
K	Back Panel	1 pc
L	Side Panel	2 pcs
M	Bottom Panel	1 pc
N	Bottom Panel Big Support	3 pcs
O	Bottom Panel Small Support	2 pc
P	Surface Bar ( 2 holes )	1 pc

## hardware for bed (1)


1	JCBC M6 X 40	2 pcs
2	M5 x 70mm	1 pc
3	M4 x 65mm	1 pc
4	CSK M4 x 32mm	2 pcs
5	CSK M4 x 50mm	4 pcs
6	Adjuster	2 pcs
7	JCBB M8 X 20	8 pcs
8	CSK M4 x 16mm	24 pcs
9	CSK M4 x 32mm	16 pcs
10	CSK M4 x 50mm	8 pcs
11	Roller	6 pcs
12	Power Nail 6/8	24 pcs
13	Metal	2 pcs

## hardware for panel (2)


Step 1 : Tighten the legs (D) to both footboard (B) as shown.

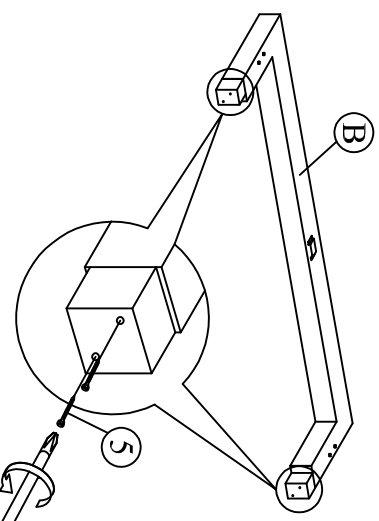

Step 2 : Attach side rail (C) to headboard (A) and footboard (B) by pushing the bracket down to fit it.

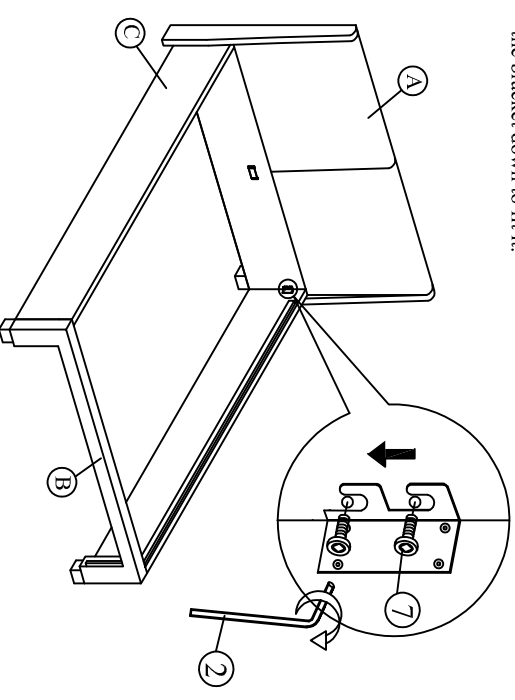


Step 3 : Attach the support legs (F) to the center rail (E) of the bed as shown.

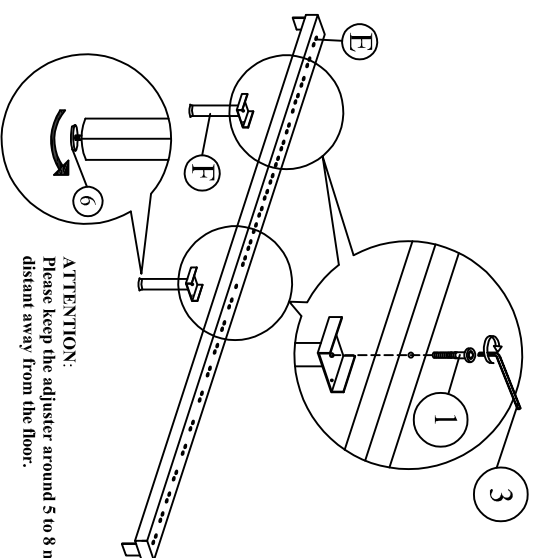


ATTENTION:  
Please keep the adjuster around 5 to 8 mm  
distant away from the floor.


Step 4 : Slide the center rail (E) to the headboard (A) and footboard (B).

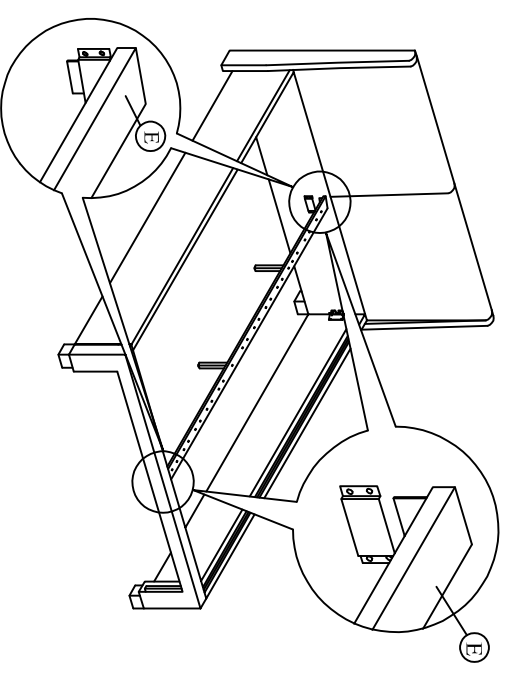


Step 5 : Tighten the side panel (L) to the front panel (J) and back panel (K) with screws (10) using screw driver (not included).

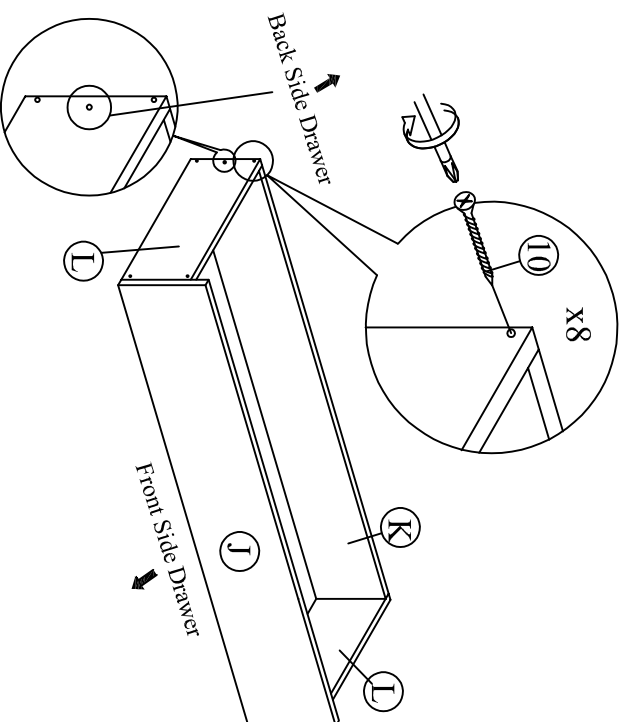


Step 6 : Slide the footboard bottom panel (M) to the set up drawer.

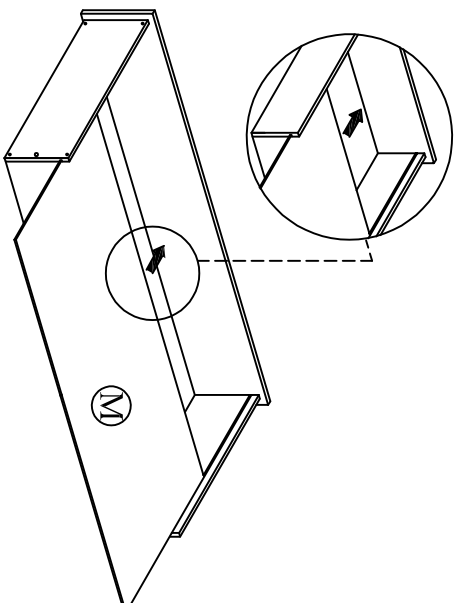

Step 7 : Tighten the bottom panel support (N & O) with screws (9) using screw driver (not included). Attach the bottom panel with Nail (12) using the hammer (not included).

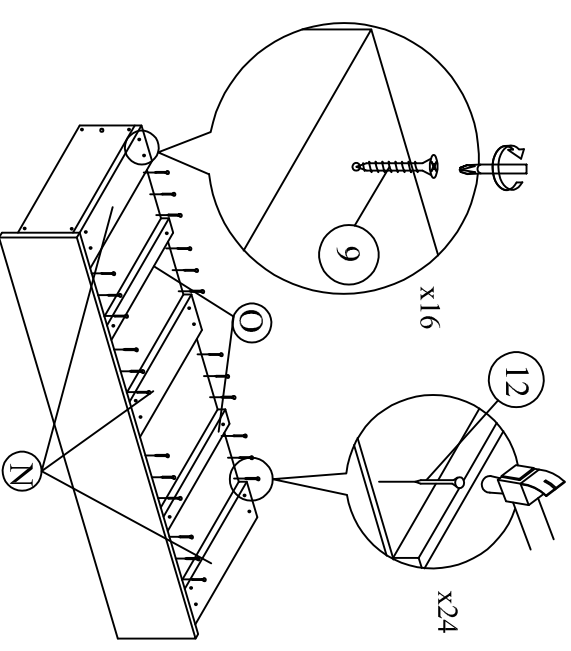

Step 8 : Tighten the roller (11) with screws (8) using screw driver (not included).

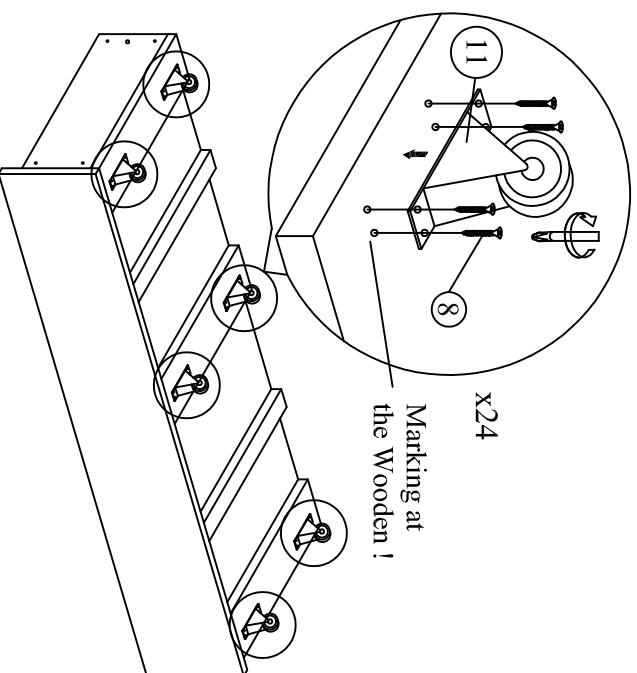

Step 9 : Affix the Stiffener Slat (P) to the side rail support wood and the center rail (E). Tighten all the 4 corner, follow by assembly of the slat holders with LVL slats as shown.

